

The PhoneGuardian 100 Quick Start

Available from www.m2cshop.com



PhoneGuardian 100

Setting up the Phone

To set up the PhoneGuardian 100, do the following:

1. Insert the four AA 1.5 V batteries into the battery compartment in the underside of the base unit.
2. Connect the telephone receiver to the telephone base using the curly cord supplied.
3. Connect the base unit to the telephone socket using the telephone connection cable.
4. Connect the base unit to the mains power outlet using the power adapter plug.

The figure below shows how to set up PhoneGuardian 100.

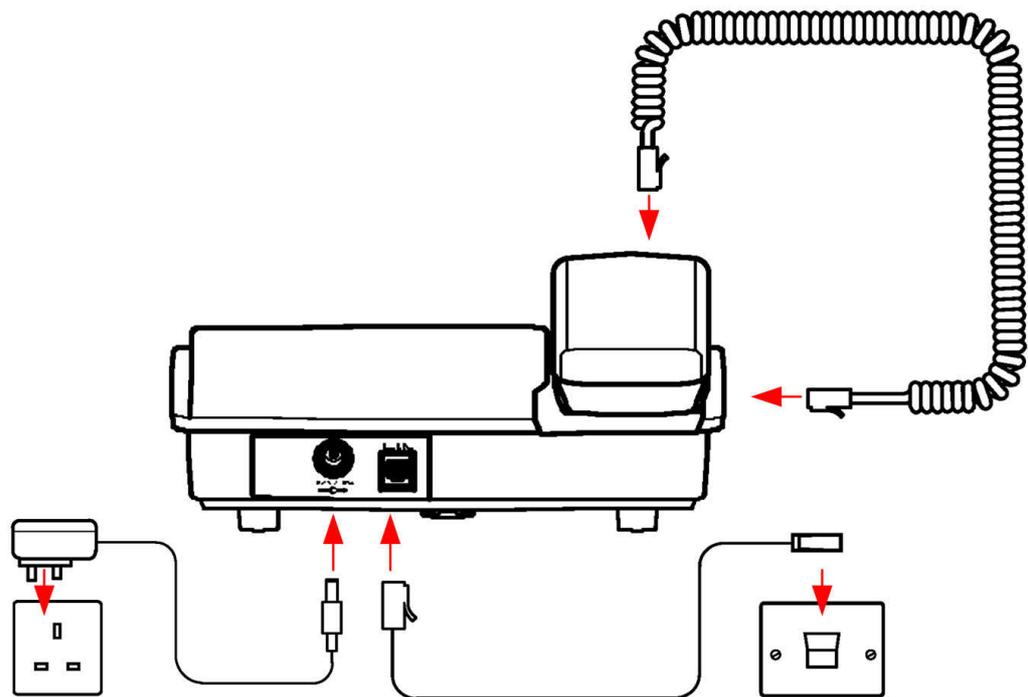


Figure 1-1 Install the PhoneGuardian 100

Available from www.m2cshop.com

Recording the Emergency Message

The emergency call functionality is used to dial an emergency service, members of the family or other persons for assistance. For information on storing the emergency numbers, see [Storing Emergency Numbers](#). For information on how to place the emergency calls, see [Making an Emergency Call Using the Emergency Call Pendant](#).

PhoneGuardian 100 contains a pre-recorded alert message. You can replace this message with one of your own. The figure below shows how to do this:

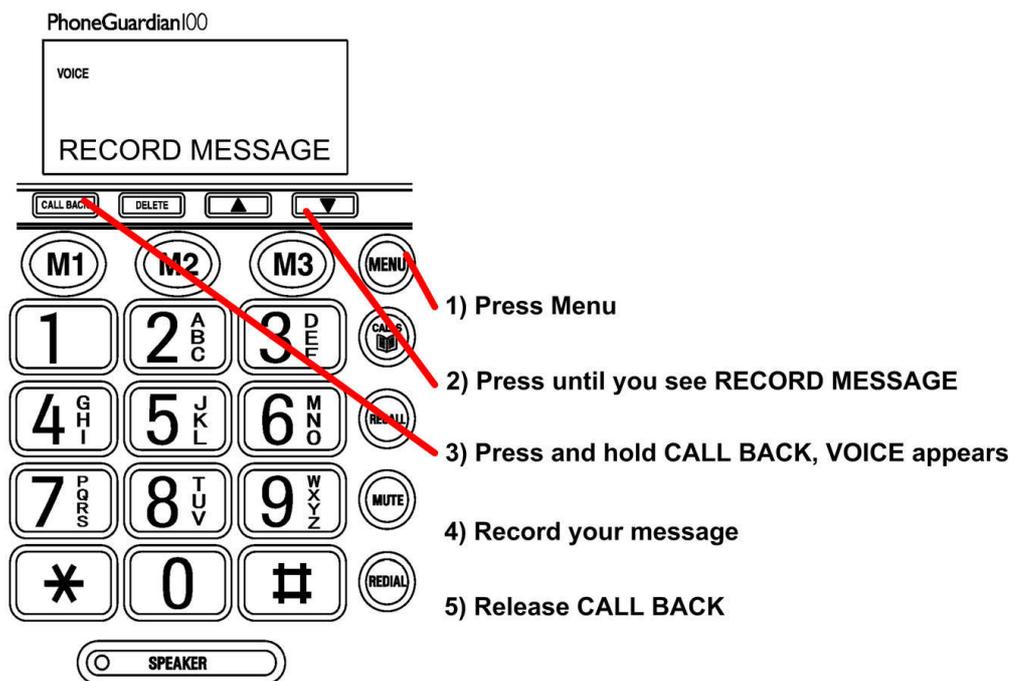


Figure 1-2 Recording the Emergency Message

Note: **You must end your own alert message by clearly telling the receiving party to respond to your emergency call by pressing the 0 key!**

An example message is "This is <your name> at <your address>, I am in need of assistance, please respond by pressing the 0 key!".

Storing Emergency Numbers

An emergency call is made automatically to the phone numbers assigned to the quick dial buttons. That is, the M1, M2 and M3 buttons.

The following figure shows how to save an emergency number.

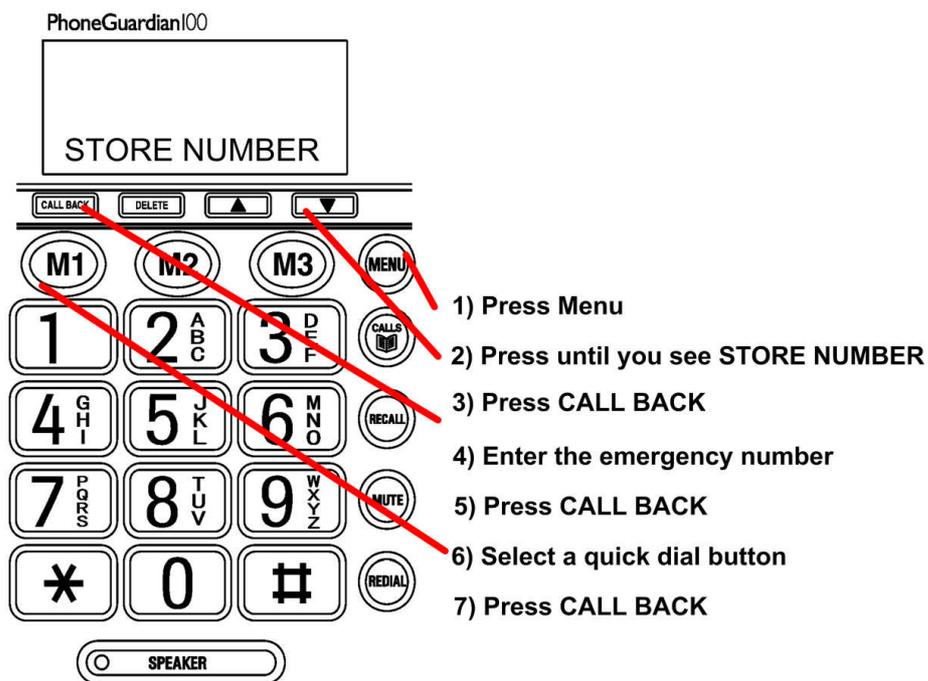


Figure 1-3 Saving an Emergency Number

The phone numbers assigned to the quick dial keys cannot be deleted. Existing entries are overwritten when you store new numbers.

Making an Emergency Call Using the Emergency Call Pendant

The automatic emergency call is initiated by pressing the quickdial buttons on the telephone or the button on the emergency call pendant.

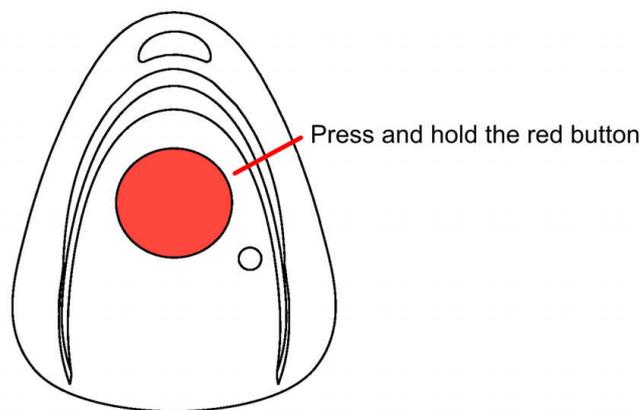


Figure 1-4 Make an Emergency Call

When an emergency call is made, PhoneGuardian 100 behaves in the following way:

1. The telephone issues a warning signal for 15 seconds.
2. The telephone activates speakerphone and plays the alert message.
3. The emergency numbers are dialed at 60 second intervals. **An emergency call is acknowledged by a call recipient pressing the “0” button.**
4. When the call is acknowledged, the phone is set to speakerphone mode for 3 minutes. After the 3 minutes, the emergency numbers are dialed again.

Note: If no phone number has been assigned to M1, M2 or M3, no phone number is dialed but a loud warning signal is issued from the telephone.